


Chevron Baffle

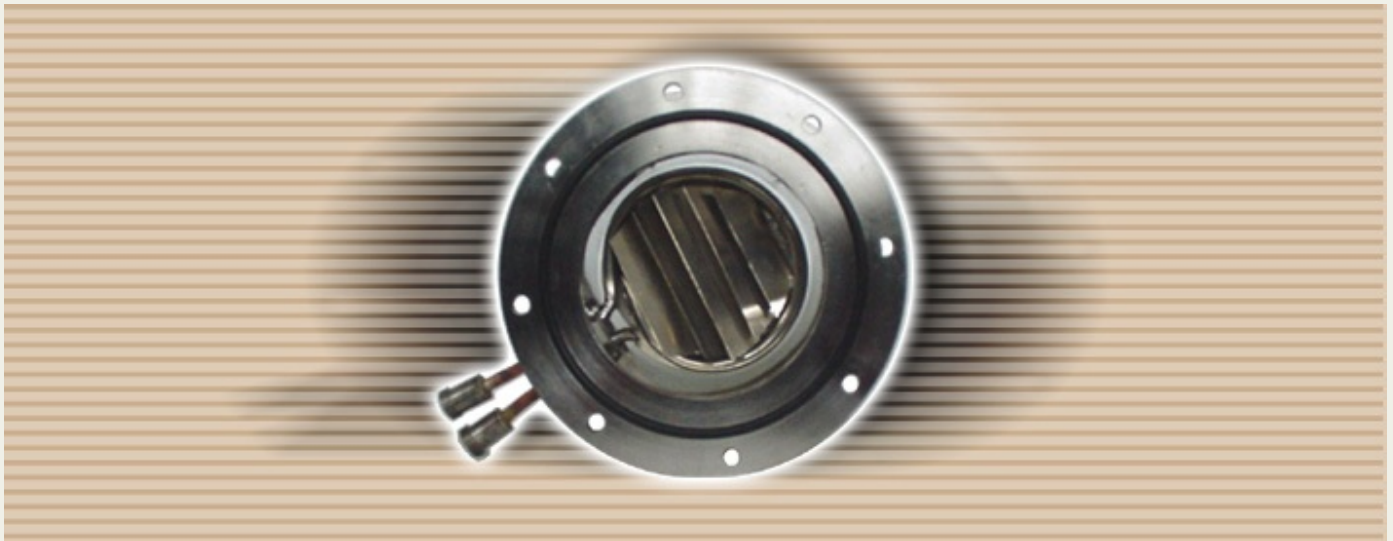

HINDHIVAC Chevron Baffles are used above the oil diffusion pump to trap the backstreaming of oil vapour from oil diffusion pump. The design of the chevron baffle is such that, it has maximum conductance and is optically opaque for effective condensing of oil vapour. The baffles are fabricated with copper and are normally water cooled. The body is made of stainless steel and inside baffles are fabricated out of copper. This baffle is offered in water cooled model. Also refrigeration cooled baffle can be manufactured for special applications.

Sizes: 150mm, 250mm, 350mm, 500mm & custom built

HIND HIGH VACUUM CO. PVT. LTD.

Site No.17, Phase 1, Peenya Industrial Area, Bangalore - 560 058, India. Ph: 080-8394518, 8394615, 8394617, 8394640. Fax: 080-8394874. E.Mail : info@hindhivac.com

SALES OFFICE

Baroda: Ph: 33178, 359039. Fax: 0265-331505. **Calcutta:** Ph: 4661462, 4649182. Fax: 033-4662830. **Chennai:** Ph: 4891061. Fax: 044-4891061. **Hyderabad:** Ph: 3235504, 3234609. Fax: 040-3235504. **Mumbai:** Ph: 5550003, 5587219. Fax: 022-5563724. **New Delhi:** Ph: 6282410, 6282411. Fax: 011-6282412. **Pune:** Ph: 5466095, 5442426. Fax: 020-5466095.