


Vacuum Valves



Precision Needle Valve

Precision Needle Valve is compactly designed by **HINDHIVAC** with reliable single seal and replaceable needle seating. Nickel plated assembly valve is fitted with a finely ground stainless steel needle. A measuring dial with clear marking of 100 equal divisions denoting 0-3000cc (6 to 7 turns of the needle), are mounted on the valve. The flow rate is maintainable at 10^{-6} torr against the atmosphere. Specially grounded Stainless Steel needle and the high precision bore of the body ensures repeatable and constant flow rates.

	A	B	C	D
Nv1	96	42	50 3.3	Entry for OD pipe

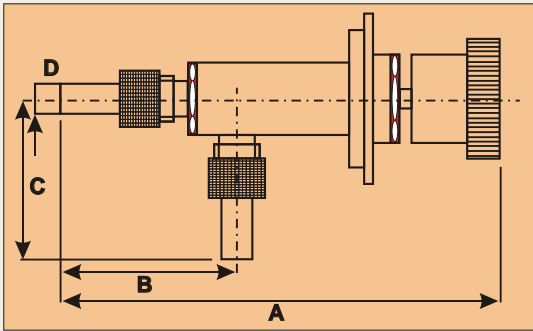

Manually Operated Air Admittance Valve

Manually Operated Air Admittance Valves are designed and manufactured for admitting air into the vacuum chamber or pipeline to break vacuum. These valves can be mounted on panels or at any other convenient point as per the customers requirement.

		A	B	C	D
1/8"	Av2	66	40	25	Entry for 6, OD pipe
1/4"	Av3	70	40	25	Entry for 9.5, OD pipe
1/2"	Av4	78	40	34.5	Entry for 16, OD pipe

